 
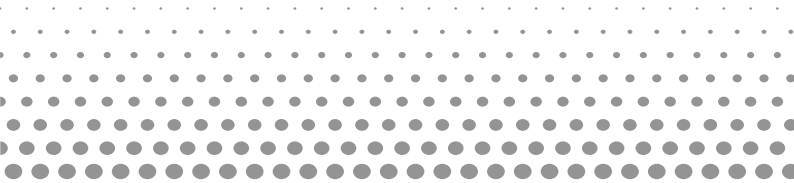 


Dynamic Facial Recognition Access Control User Manual

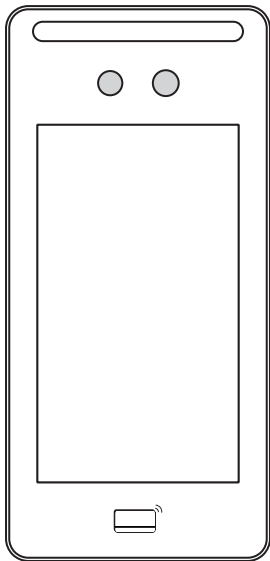


1. Introduction

This series' product is a new generation multi-functional face recognition standalone access control, use new AI processor design, and RTOS intelligent operation system, powerful function, stable and reliable, with read mode, standalone mode etc, apply to many different places, be widely used at office, home, villa, bank, prison etc.

2. Technical Specifications

| | |
|----------------------|---|
| OS | RTOS intelligent operation system |
| Camera | 200W pixel HD color camera \200W infrared live camera |
| Fill Light | LED high light filling lamp (automatic control according to ambient light) |
| Working Voltage | DC-12V-10% |
| Power Supply | DC-12V 3-5A |
| Display Screen | 5-inch LCD screen, capacitive touch screen 272*480 |
| Working Temperature | -15°C ~ +45°C (Storage Temperature-10°C ~ +65°C) |
| Working Humidity | 20% ~ 90% (Storage Humidity 20% ~ 90±2%) |
| Capacity | 2000 Face/code/card in total |
| Users Record | 100,000pcs |
| Keypad | Touch screen virtual keypad |
| Access Mode | Face/Card/Pin, Face+Pin, Pin+Card(EM) |
| Recognition Distance | pure dynamic face recognition - 0.5-3m ,open liveness 0.5-1.5m |
| Intelligent Function | Infrared liveness detection |
| Door Contact signal | One group signal Input |
| Door Bell Control | One group signal |
| Relay Output | Door open signal control one group |
| Output | WG26/34 out put (could be used as a reader and connected with a controller) |
| Weight | 500g |
| Size | 173*83*22mm |


 
3.Product Introduction

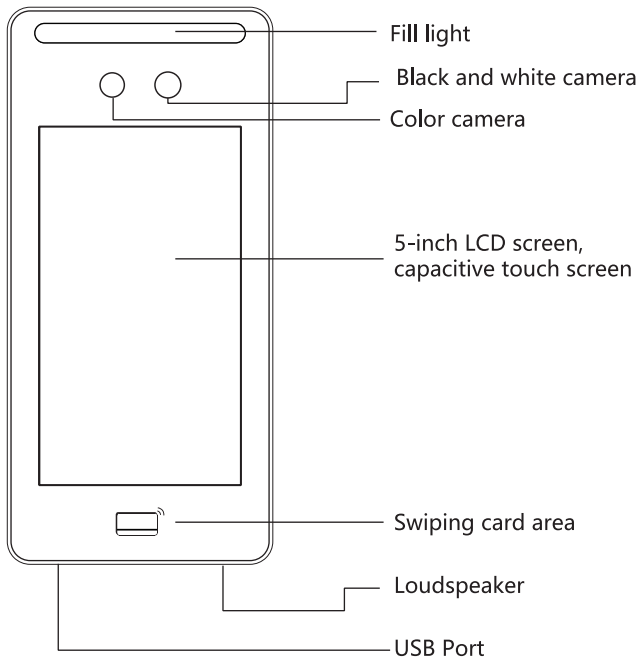

4.Product Use

4.1 Main Interface

  Click interface - Menu Key - Input master code (default:999999)to enter main menu,or scan master face to enter

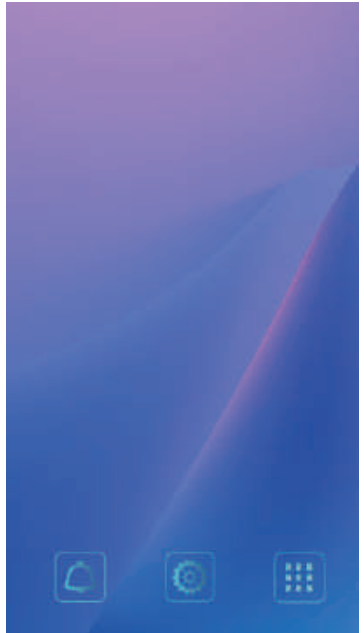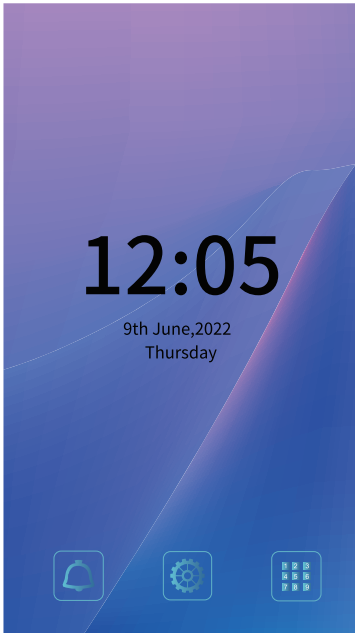

< Administrator Password

Password:

Confirm

Face login

< Open the door password

Passowrd:

Confirm



MENU



USER



ACCESS



RECORD



ALGORITHM



About device




SYSTEM


4.2 User Management


4.2.1 Add user

Add user: Click menu user management → creat user → register number,name,-card,password,log face,select permission (administrator or user)

< User management

 Creat user >

 User list >

 Batch import of users >

< Creat user

Number

Name

 
 
Card

Password

Log face Log >

Permission User >

Confirm

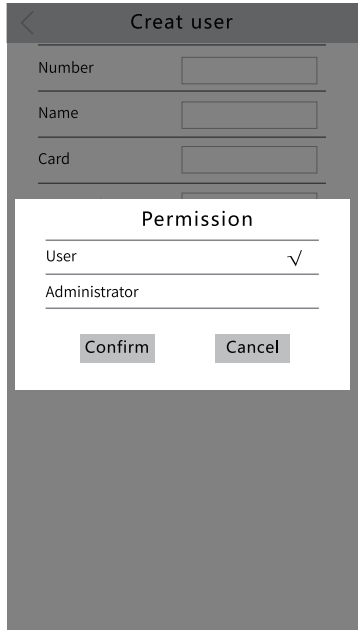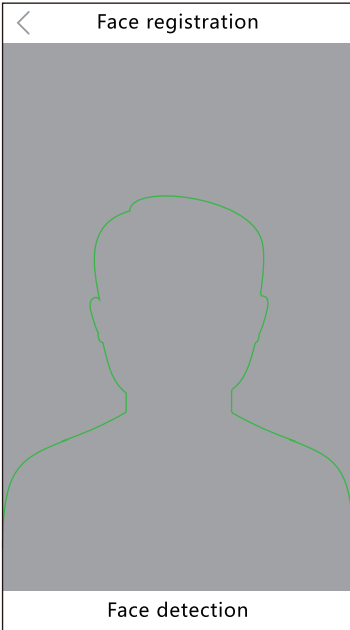




4.2.2 User list

Search user: Click Menu User management → user list

| Users list | | Q Query |
|------------|--------|---|
| 14 | Steven |  |
| 1 | Lucy |  |
| 10 | Aaron |  |
| 14 | Vivian |  |
| 1 | Jimmy |  |
| 10 | Colin |  |
| 14 | Lee |  |
| 1 | Lily |  |
| 10 | Paul |  |
| 14 | Niki |  |
| 1 | Grace |  |

1/12     

| Users list | | Q Query |
|------------|--------|---|
| 14 | Steven |  |
| 1 | Lucy |  |
| 10 | Aaron |  |




Find users






Please enter power consumption or name to find

Number

Name

Query **Cancel**

| | | |
|----|-------|---|
| 10 | Paul |  |
| 14 | Niki |  |
| 1 | Grace |  |

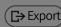1/12     

4.2.3 Batch import of users

< Batch import of users

Step1:Prepare batch recognition excel file according to the instructions

Step2:Copy the excel file to the root directory of the u disk

 
 
Step3:Click recognition button

Import

4.3 Access Settings

4.3.1 Access mode

Access: Click menu Access settings → Access → Face/Card/PIN or Face+card or Face+PIN→ Confirm

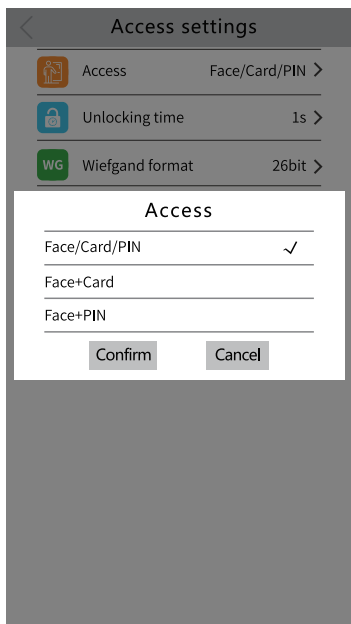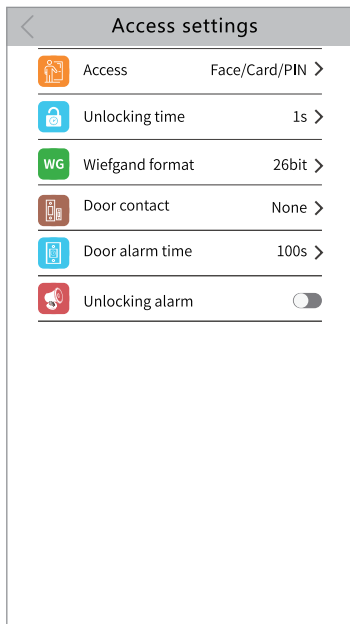

4.3.2 Unlocking time

Click menu Access Settings → Unlocking Time → Select the appropriate time
→ confirm

4.3.3 Wiegand format

Click the menu Access Settings → Wiegand format → 26bit / 34bit → confirm

4.3.4 Door Contact

Click menu Access Setting → Door Contact → Remain closed/Remain Open/None
→ Confirm

4.3.5 Door Alarm Time

Click menu Access Setting → Door Alarm Time → Adjust time → Confirm

4.3.6 Unlocking Alarm


Click menu Access Setting → Unlocking Alarm → Turn on/off


4.4 Open the door to record


4.4.1 View record

View record: click menu open the door to record→View record











< Open the door to record



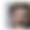

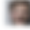
 View record >

 Stored information >

 Interval time 10 Seconds >

< View record Q Query


| | |
|--|-----------------|
|  14 | 2022/5/11 16:11 |
|  1 | 2022/5/11 14:58 |
|  10 | 2022/5/11 14:53 |
|  14 | 2022/5/10 12:15 |
|  1 | 2022/5/10 12:00 |
|  10 | 2022/5/10 12:00 |
|  14 | 2022/5/10 12:00 |
|  1 | 2022/5/10 12:00 |
|  10 | 2022/5/10 12:00 |
|  14 | 2022/5/10 12:00 |
|  1 | 2022/5/10 12:00 |

1/12     

4.5 Algorithm setting

4.5.1 Liveness detection

 Click menu Algorithm setting → Liveness detection → Turn on/off

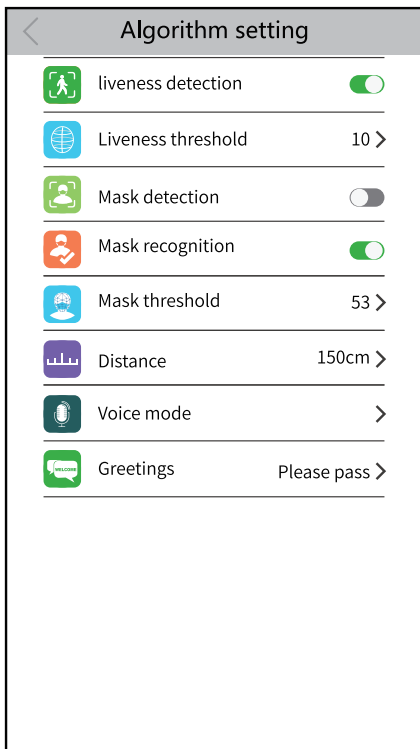

4.5.2 Liveness threshold

Click menu Algorithm setting→Liveness threshold→ adjust number→Confirm

4.5.3 Mask detection

Click menu Algorithm setting→ Mask detection→ Turn on/off

4.5.4 Mask recognition

Click menu Algorithm setting→ Mask recognition→ Turn on/off

4.5.5 Mask threshold

Click menu Algorithm setting→ Mask threshold→adjust number→ Confirm

4.5.6 Distance

Click menu Algorithm setting→ distance→adjust number→ Confirm

4.5.7 Voice mode

Click menu Algorithm setting→ Voice Mode→Broadcast time,Broadcast greeting
→ Confirm

4.5.8 Greetings

Click menu Algorithm setting→ Voice Mode→Please pass, welcome→ Confirm

4.6 Related to device

4.6.1 System version V2.1.9

4.6.2 Algorithm Version 2020/11/12

4.6.3 System Upgrade

4.6.4 Factory reset

4.6.5 System Maintenance


4.6.6 Factory Test


4.7 System settings


4.7.1 Admin password


Reset password: click menu → system → admin password → reset password


< System settings


 Admin password >



 Language English >

 Time zone Beijing >

 Time settings >

 Volume settings 10 >

 Brightness settings 5 >

 Fill light settings  >

< Reset password

Old password

New password

Confirm



4.7.2 Language

Click menu → Language → Chinese / English

4.7.3 Time zone

Click menu → system → time zone →select the time zone → confirm

< Time zone setting

Beijing ✓

Tokyo

New york

London

Paris

Berlin

4.7.4 Time settings

Click the menu → system → Time Settings → Select time → confirm

Time settings

Automatic

Manual 2022/05/11/16:14:04

2022 Year 5 Mon 11 day 16 : 14 : 4

Confirm

4.7.5 Volume setting

Click the menu → system → volume settings → turn up or down → confirm

4.7.6 Brightness settings

Click the menu → system → Brightness settings → turn up or down → confirm

4.7.7 Fill light settings

Click the menu → system → brightness setting → turn on / turn off

5 Installation

- 1) The device is installed indoor or outdoor. Please avoid direct sunlight and rain, and avoid infrared and strong light on the camera.
- 2) The wiring of power cables and access control cables should be as short as possible to avoid interference.
- 3) According to the application scenario to confirm the installation height, keep the face recognition distance in 30-150 cm.
- 4) Register face should avoid strong light or dark environment to keep the face clearly.


6. Access control wiring diagram

| Item | mark | color | function |
|------|--------|--------|---|
| 1 | BELL_A | Pink | Door bell one end |
| 2 | BELL_B | Pink | Door bell on the other hand |
| 3 | D0 | Green | Wiegand output D0 |
| 4 | D1 | White | Wiegand output D1 |
| 5 | ALARM | Gray | Negative alarm (positive alarm connect +12V) |
| 6 | OPEN | Yellow | Exit button one end (on the other end connects GND) |
| 7 | D_IN | Brown | Door contact switch one end (on the other end connects GND) |
| 8 | DC12V | Red | Positive power supply |

| | | | |
|----|-----|--------|-----------------------|
| 9 | GND | Black | Negative power supply |
| 10 | NO | Blue | Relay NO end |
| 11 | COM | Purple | Relay COM end |
| 12 | NC | Orange | Relay NC end |

7 Diagram

 Special power supply

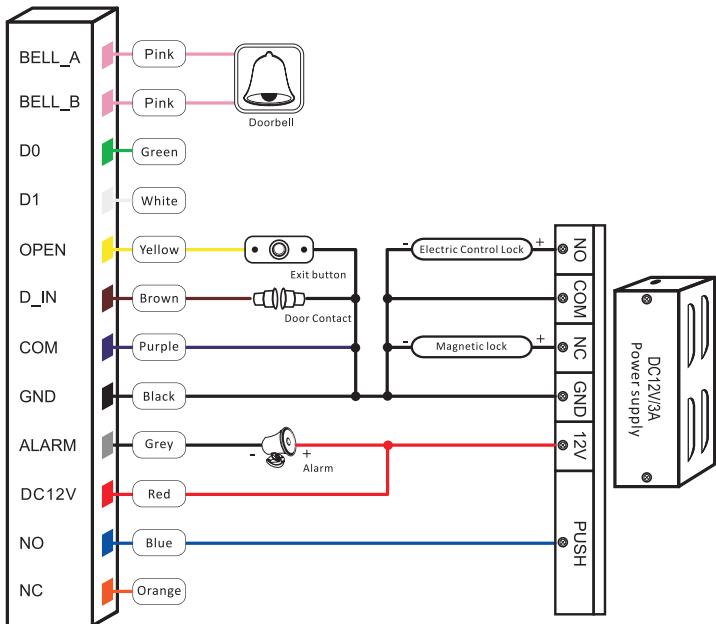

8. Packing list

| Name | Model/size | Quantity | Remarks |
|---------------------------------|------------|----------|-------------------------------------|
| Face recognition access control | | 1 | |
| User manual | | 1 | |
| Self tapping screws | Φ4mm×25 mm | 2 | Used in fixing |
| Rubber plug | Φ6mm×28 mm | 2 | Used in fixing |
| Star screw driver | Φ20mm×60mm | 1 | Special for this device |
| Star screw | Φ3mm×5mm | 1 | Used in fixing front and back cover |

Warm Tips

- * Please don't maintain the device privately, any issues please turn back to factory.
- * To avoid unnecessary trouble, please check concealed wires or line pipes carefully if need to drill a hole before installation, moreover, please wear security glasses when drilling a hole or fixing wires.
- *If upgrade, manual may changed a little.